

Lectro UHF Frequency Block Chart

Block	Start Frequency	End Frequency	North & South America TV Channel			
20 <i>Block 20 is no longer available.</i>	512		21	512	to	518
			22	518	to	524
			23	524	to	530
			24	530	to	536
		537.5	25	536	to	542
21	537.6		25	536	to	542
			26	542	to	548
			27	548	to	554
			28	554	to	560
		563.1	29	560	to	566
22	563.2		29	560	to	566
			30	566	to	572
			31	572	to	578
			32	578	to	584
		588.7	33	584	to	590
23 <i>TV37 (608-614 MHz) cannot be used for wireless in the USA.</i>	588.8		34	590	to	596
			35	596	to	602
			36	602	to	608
		614.3	37	608	to	614
24	614.4		38	614	to	620
			39	620	to	626
			40	626	to	632
			41	632	to	638
		639.9	42	638	to	644
25	640		42	638	to	644
			43	644	to	650
			44	650	to	656
			45	656	to	662
		665.5	46	662	to	668
26	665.6		46	662	to	668
			47	668	to	674
			48	674	to	680
			49	680	to	686
		691.1	50	686	to	692
27	691.2		50	686	to	692
			51	692	to	698
			52	698	to	704
			53	704	to	710
			54	710	to	716
		716.7	55	716	to	722
28	716.8		56	722	to	728
			57	728	to	734
			58	734	to	740
		742.3	59	740	to	746

Block	Start Frequency	End Frequency	North & South America TV Channel			
29	742.4		59	740	to	746
			60	746	to	752
			61	752	to	758
			62	758	to	764
		767.9	63	764	to	770
30 <i>Block 30 is European products only.</i>	768		63	764	to	770
			64	770	to	776
			65	776	to	782
			66	782	to	788
		793.5	67	788	to	794
31 <i>Block 31 is European products only.</i>	793.6		67	788	to	794
			68	794	to	800
			69	800	to	806
		819.1	n/a			
32 <i>Block 32 is European products only.</i>	819.2		n/a			
			n/a			
			n/a			
		844.7	n/a			
33 <i>Block 33 is European products only.</i>	844.8		n/a			
			n/a			
			n/a			
		870.3	n/a			